

减速箱减速比性能对照表REDUCTION RATIO PERFORMANCE CHART

减速比REDUCTION RATIO			3	3.6	5	6	7.5	10	12.5	15	18	20	25	30
40W	50Hz	最高转速r/min Max output speed	433	361	260	217	173	130	104	87	72	65	52	43
		额定转矩N·m Rated torque	0.77	0.92	1.28	1.53	1.92	2.56	3.20	3.83	4.60	5.11	5.73	6.88
	60Hz	最高转速r/min Max output speed	533	444	320	267	213	160	128	107	89	80	64	53
		额定转矩N·m Rated torque	0.64	0.77	1.07	1.28	1.60	2.13	2.66	3.20	3.83	4.26	4.78	5.73
60W	50Hz	最高转速r/min Max output speed	433	361	260	217	173	130	104	87	72	65	52	43
		额定转矩N·m Rated torque	1.19	1.43	1.98	2.38	2.98	3.97	4.35	5.22	6.27	6.96	8.26	9.92
	60Hz	最高转速r/min Max output speed	533	444	320	267	213	160	128	107	89	80	64	53
		额定转矩N·m Rated torque	0.99	1.19	1.65	1.98	2.48	3.31	3.63	4.35	5.22	5.80	6.89	8.26
减速比REDUCTION RATIO			36	40	50	60	75	90	100	120	150	180	200	
40W	50Hz	最高转速r/min Max output speed	36	33	26	22	17	14	13	11	9	7	7	
		额定转矩N·m Rated torque	8.25	9.17	10	10	10	10	10	10	10	10	10	
	60Hz	最高转速r/min Max output speed	44	40	32	27	21	18	16	13	11	9	8	
		额定转矩N·m Rated torque	6.88	7.64	9.16	10	10	10	10	10	10	10	10	
60W	50Hz	最高转速r/min Max output speed	36	33	26	22	17	14	13	11	9	7	7	
		额定转矩N·m Rated torque	11.90	13.22	16.53	19.83	20	20	20	20	20	20	20	
	60Hz	最高转速r/min Max output speed	44	40	32	27	21	18	16	13	11	9	8	
		额定转矩N·m Rated torque	9.92	11.02	13.77	16.53	20	20	20	20	20	20	20	

*表中转速是以电机的平均转速(50Hz:1300r/min、60Hz:1600r/min)为基数除以减速比而算出的数值。
*实际转速随负载大小而少量变化，变化范围为±8%左右。
*The speed in the table is the value of average motor speed (50Hz: 1300r/min, 60Hz: 1600r/min) divided by the reduction ratio.
*The actual speed changes according to the load (±8%).



标准减速箱
STANDARD GEARBOX
90GF □H



带耳减速箱
EARED GEARBOX
90GF □HE



直角中空减速箱
RIGHT ANGLE HOLLOW GEARBOX
L90GF □RC



中间减速箱
INTERMEDIATE GEARBOX
90GM10



直角中实减速箱
RIGHT ANGLE SOLID GEARBOX
L90GF □RT

减速箱型号中的□为减速比的数值
速比：1:3~200;中间减速箱：(1：10)
□ in gearbox model indicates the reduction ratio (1:3~200);MIDDLE GEARBOX:(1：10)



□90×90mm

各型号电机性能 MOTOR PERFORMANCE

型号 MODEL	最大输出 功率(W) MAXIMUM OUTPUT POWER	电压V VOLTAGE	频率Hz FREQUENCY	电流A CURRENT	调速范围 r/min SPEED RANGE	起动转矩 mN·m START TORQUE	额定转矩(mN·m) RATED TORQUE		运行电容 RUNNING CAPACITOR
							1200r/min	90r/min	
齿轮轴 GEAR SHAFT 90YS40GV11 90YR40GV11 90YT40GV11 90YF40GV11 90YB40GV11	40	Single phase 单相 110	50Hz	0.79	90-1300	235	300	65	12μf/250V
圆轴 ROUND SHAFT 90YS40DV11 90YR40DV11 90YT40DV11 90YF40DV11 90YB40DV11			60Hz	0.71	90-1600	180	260	70	
齿轮轴 GEAR SHAFT 90YS40GV22 90YR40GV22 90YT40GV22 90YF40GV22 90YB40GV22			50Hz	0.40	90-1300	235	320	65	
圆轴 ROUND SHAFT 90YS40DV22 90YR40DV22 90YT40DV22 90YF40DV22 90YB40DV22			60Hz	0.37	90-1600	180	260	70	
齿轮轴 GEAR SHAFT 90YS40GY22 90YB40GY22			50Hz	0.35	90-1300	403	310		
圆轴 ROUND SHAFT 90YS40DY22 90YB40DY22	40	Three phase 三相 220	60Hz	0.32	90-1600	338	260		3μf/450V
齿轮轴 GEAR SHAFT 90YS40GY38 90YB40GY38			50Hz	0.21	90-1300	403	310		
圆轴 ROUND SHAFT 90YS40DY38 90YB40DY38	40	Three phase 三相 380	60Hz	0.19	90-1600	338	260		

- 虽然调速电机的调速范围为：50Hz...90~1300r/min；60Hz...90~1600r/min。但由于低速时(<400r/min)，电机转矩下降较多，易发生过载，且电机直连风扇冷却效果差，易发热，因此必须预留足够的功率余量，并且不要经常工作在低速区。因此电机最佳调速范围为：50Hz...400~1300r/min；60Hz...400~1600r/min。
- 在断开电源的同时，电机瞬间停止关保持负载。
- Although the speed range of the motor is 50Hz, 90~1300r/min, 60Hz, 90~1600r/min, it easily causes overload and the cooling effect of the motor fan is poor if the speed is too low (<400r/min) and the motor torque decreases too much; therefore, please keep sufficient power margin and avoid operating in low speed section frequently. The optimal speed range of the motor is 50Hz, 400~1300r/min, 60Hz, 400~1600r/min.
- When the power is cut off, the motor will stop immediately and hold the load.

各型号电机性能 MOTOR PERFORMANCE


型号 MODEL	最大输出 功率(W) MAXIMUM OUTPUT POWER	电压V VOLTAGE	频率Hz FREQUENCY	电流A CURRENT	调速范围 r/min SPEED RANGE	起动转矩 mN·m START TORQUE	额定转矩(mN·m) RATED TORQUE		运行电容 RUNNING CAPACITOR
							1200r/min	90r/min	
齿轮轴 GEAR SHAFT 90YS60GV11 90YR60GV11 90YT60GV11 90YF60GV11 90YB60GV11	60	Single phase 单相 110	50Hz	1.26	90-1300	350	490	200	12μf/250V
圆轴 ROUND SHAFT 90YS60DV11 90YR60DV11 90YT60DV11 90YF60DV11 90YB60DV11			60Hz	1.14	90-1600	280	490	220	
齿轮轴 GEAR SHAFT 90YS60GV22 90YR60GV22 90YT60GV22 90YF60GV22 90YB60GV22			50Hz	0.62	90-1300	350	490	200	
圆轴 ROUND SHAFT 90YS60DV22 90YR60DV22 90YT60DV22 90YF60DV22 90YB60DV22			60Hz	0.57	90-1600	280	490	220	
齿轮轴 GEAR SHAFT 90YS60GY22 90YB60GY22			50Hz	0.53	90-1300	600	460		
圆轴 ROUND SHAFT 90YS60DY22 90YB60DY22	60	Three phase 三相 220	60Hz	0.48	90-1600	490	375		4μf/450V
齿轮轴 GEAR SHAFT 90YS60GY38 90YB60GY38			50Hz	0.32	90-1300	600	460		
圆轴 ROUND SHAFT 90YS60DY38 90YB60DY38	60	Three phase 三相 380	60Hz	0.29	90-1600	490	375		

- 虽然调速电机的调速范围为：50Hz...90~1300r/min；60Hz...90~1600r/min。但由于低速时(<400r/min)，电机转矩下降较多，易发生过载，且电机直连风扇冷却效果差，易发热，因此必须预留足够的功率余量，并且不要经常工作在低速区。因此电机最佳调速范围为：50Hz...400~1300r/min；60Hz...400~1600r/min。
- 在断开电源的同时，电机瞬间停止关保持负载。
- Although the speed range of the motor is 50Hz, 90~1300r/min, 60Hz, 90~1600r/min, it easily causes overload and the cooling effect of the motor fan is poor if the speed is too low (<400r/min) and the motor torque decreases too much; therefore, please keep sufficient power margin and avoid operating in low speed section frequently. The optimal speed range of the motor is 50Hz, 400~1300r/min, 60Hz, 400~1600r/min.
- When the power is cut off, the motor will stop immediately and hold the load.

外形尺寸 (CAD) DIMENSIONS


40/60YS/YR/YT/YB/YF01

圆轴电机 重量:2.5kg
 Round-axis motor, weight:2.5kg

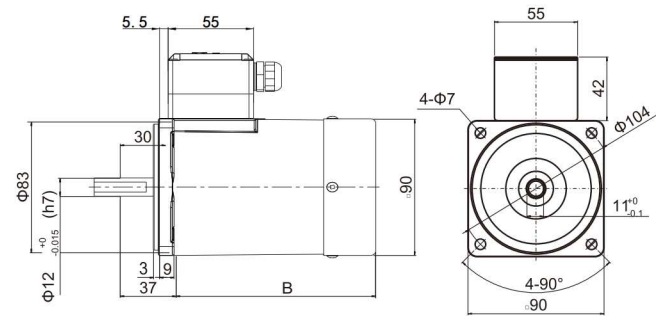


40/60YS/YR/YT/YB/YF02

组合:电机+标准减速机(减速比:1:3~200) 重量:3.7kg
 Combination: motor+standard gearbox(reduction ratio:1:3~200), weight:3.7kg

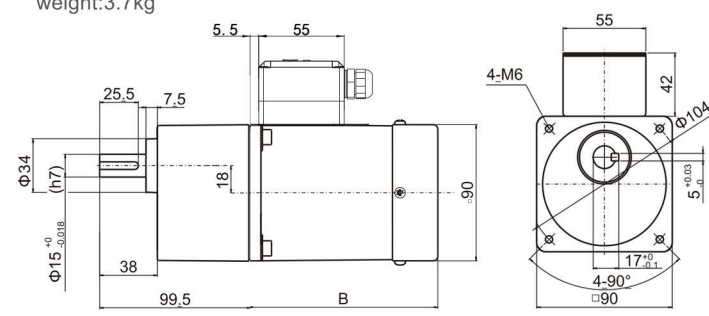

40/60YS/YR/YT/YB/YF03


组合:电机+中间减速机+标准减速机(减速比:1:200~1800) 重量:4.6kg
 Combination: motor+intermediate gearbox+standard gearbox(reduction ratio:1:200~1800), weight:4.6kg

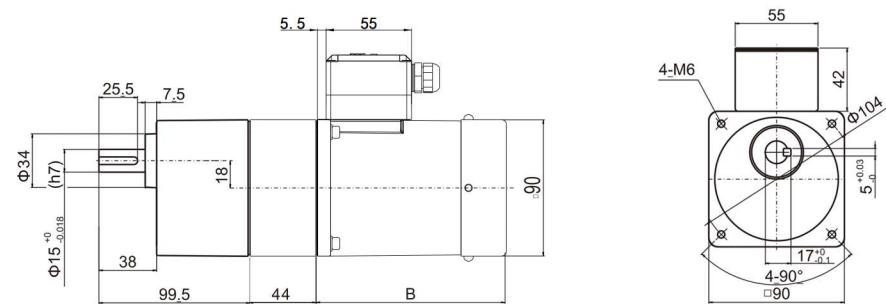

序号 No.	电机类型 Motor type	A	B	C
1	YS/YR	276.5	125	320.5
2	YT	287.5	136	331.5
3	YB	311.5	160	355.5
4	YF	323.5	172	367.5


40/60YS/YR/YT/YB/YF04

组合:电机+带耳减速机(减速比:1:3~200)
 重量:3.7kg
 Combination: motor+eared gear(reduction ratio:1:3~200), weight:3.7kg

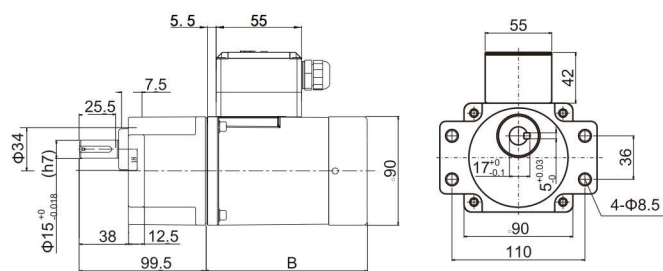

40/60YS/YR/YT/YB/YF05



组合:电机+中间减速机+带耳减速机(减速比:1:200~1800) 重量:4.6kg
 Combination: motor+intermediate gearbox+eared gear(reduction ratio:1:200~1800), weight:4.6kg

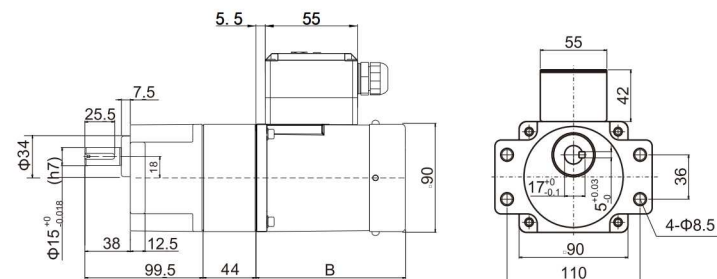

外形尺寸 (CAD) DIMENSIONS



40/60YS/YR/YT/YB/YF06

组合:电机+直角中实减速机(减速比:1:3~200)
 重量:5.4kg
 Combination: motor+right angle solid gearbox(reduction ratio:1:3~200), weight:5.4kg

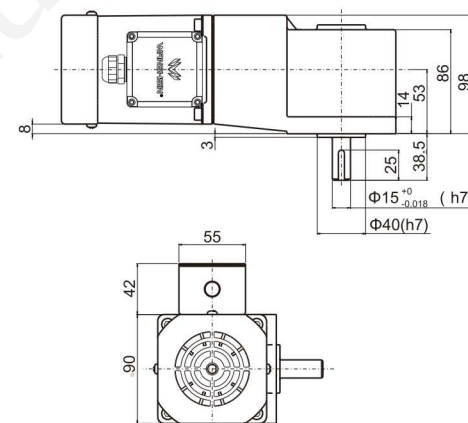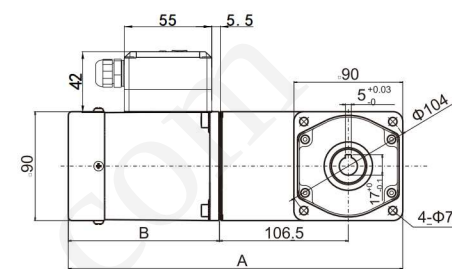


40/60YS/YR/YT/YB/YF07

组合:电机+中间减速机+直角中实减速机(减速比:1:200~1800) 重量:6.3kg
 Combination: motor+intermediate gearbox+right angle solid gearbox(reduction ratio:1:200~1800), weight:6.3kg

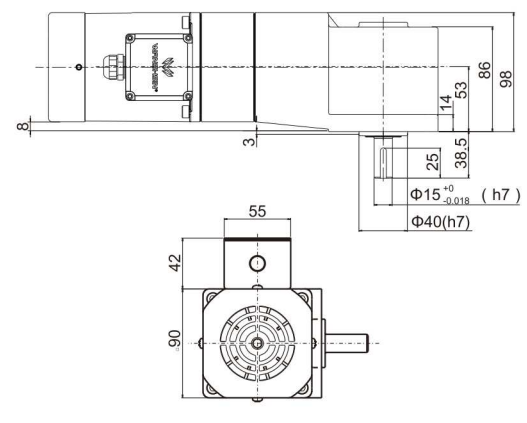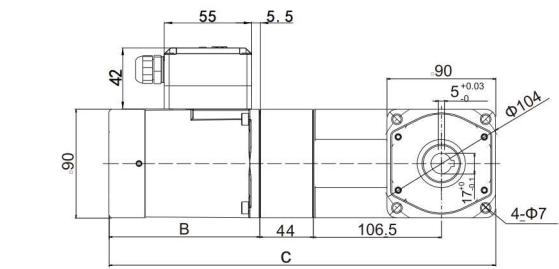

40/60YS/YR/YT/YB/YF08

组合:电机+直角中空减速机(减速比:1:3~200) 重量:5.3kg
 Combination: motor+right angle hollow gearbox(reduction ratio:1:3~200), weight:5.3kg

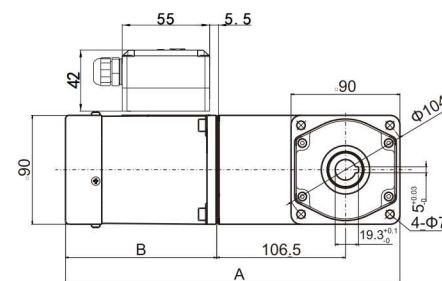

40/60YS/YR/YT/YB/YF09

组合:电机+中间减速机+直角中空减速机(减速比:1:200~1800) 重量:6.2kg
 Combination: motor+intermediate gearbox+right angle hollow gearbox(reduction ratio:1:200~1800), weight:6.2kg

